



Crime Prevention Products



Copsham House, 53 Broad Street,

Chesham, Buckinghamshire, HP5 3EA

Tel : 01494 792592

Fax : 01494 792590

Bike Alarm

Personal Secrete Coded Embedded
Unique spacey design with motion detection sensor to alert any
unauthorized movement to your bike.
Loud Alarm Sound to Keep
Practical Waterproof & Shock-Proof Design included

FEATURE

- Three different alarm sounds (siren, bell & ambulance) for selection.
- Three alarm times (10, 20 or 30 seconds) for selection.
- Emergency Panic function built-in
- Programmable 4 digit codes to arm/ disarm system
- Intelligent micro processor control circuit guarding the protected area
- Durable ABS plastic body
- Low battery indication included

BATTERY INSTALLATION

- Switch off the battery cover on the side of the Bike Alarm (please refer to drawing I)
- Use small "+" screw driver to unscrew the battery inner cap (please refer to drawing II)
- Follow the polarity instruction inside of the battery compartment to install 3pcs AAA new batteries (not included). Alkaline battery is recommended.
- Screw back the inner cap carefully
- Replace the battery cover firmly



DRAWING I



DRAWING II

HOW TO SET THE PERSONAL SECRETE CODE?

After batteries installation, the red LED starts to flash. Now, you can start to key in the 4 digit secret codes (example: 1122) from the BIKE ALARM and you will hear several beeps and the LED stop flashing after 5 seconds. Now, your secret code has set up successfully!

HOW TO ARM/ DISARM THE BIKE ALARM?

- Press "F" button twice to ARM the BIKE ALARM. You will hear several beeps and red LED will flash
- Now, the LED will flash every 5 seconds to indicate the BIKE ALARM is ARMED.
- Loud warning signals will be heard if BIKE ALARM detects unauthorized movement.
- The BIKE ALARM will be triggered if a continuous movement is detected within 2 seconds after warning signals.
- 3 seconds after alarm triggering, a piercing and loud sound will go off.
- Press "F" and 4 digit secret codes to DISARM BIKE ALARM

HOW TO CHANGE SECRET CODE?

- Press "F" and 4 digit codes. 4 short beeps will be heard and LED flashes. Now, you can press the new 4 digit secrete codes.
- 4 long beeps will be heard, LED stop flashing. Now, the new secreted codes are set successfully! The new secret code will not be setting if the new codes cannot be completed within 5 seconds.

HOW TO SET ALARM SOUND?

- Press "1" "F" "1" to set alarm sound to SIREN
- Press "1" "F" "2" to set alarm sound to BELL
- Press "1" "F" "3" to set alarm sound to AMBULANCE
- A short demonstration sound will be heard after every selection

HOW TO SET ALARM TIME?

- Press "2" "F" "1" to set alarm time last to 10 seconds
- Press "2" "F" "2" to set alarm sound last to 20 seconds
- Press "2" "F" "3" to set alarm sound last to 30 seconds
- Series of beeps will be heard to show successfully setting

HOW TO USE PANIC ALARM?

Press "F" continuously for more than 2 seconds to force the BIKE ALARM goes off if any emergency.

LOW BATTERY

Under the armed mode, LED will flash every 20 seconds to indicate the battery power is low and need new battery replacement.

NOTE:

- Every alarm time, alarm sound & new secrete settings should be proceed under the BIKE ALARM is NOT armed.
- BIKE ALARM will go off if incorrectly secret codes to be key in continuously for 3 times