


FITTING INSTRUCTIONS


STEP 1

POSITION WHEEL CLAMP ONTO FRONT FACE OF TYRE. WITH CHAIN TO FRONT OF CLAMP.

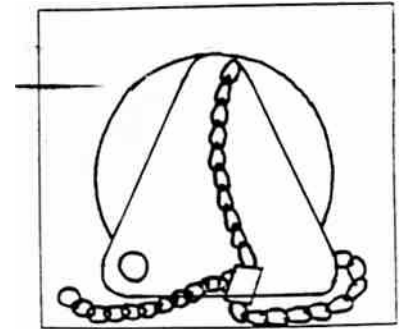

STEP 2

PLACE RIGHT HAND SIDE OF CHAIN LENGTH AROUND WHEEL AND TOP CHAIN LENGTH OVER TOP OF WHEEL.

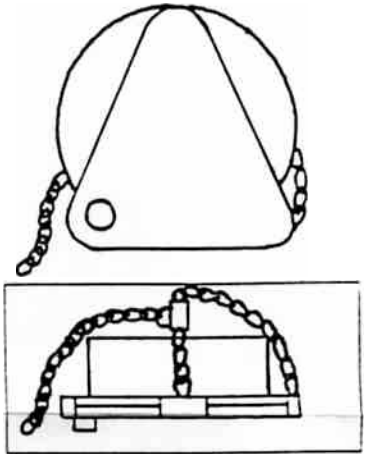

STEP 3

PLACE LEFT HAND SIDE OF CHAIN-LENGTH AROUND WHEEL AND PASS CHAIN THROUGH HOLE IN BOTTOM LEFT CORNER OF WHEEL CLAMP.



STEP 4

PULL LOOSE END OF CHAIN TIGHT AND SECURE PADLOCK THROUGH LINK.

