



Made in the U.K.

WINDOW SWING LOCKS

809

To fit a Window Swing Locks you will require - a bradawl (or 2.5mm drill), posidriv screwdriver, ruler and pencil.

If fitting to hardwood drill 2.5mm pilot holes.





Easy fitting guide

- A** Close window and select position of Window Swing Lock.
◀ Position if fitting a single lock.
◀ Position if fitting two locks.
- B** Position striker plate flush with edge of fixed frame with the flat face of striker plate facing the window. Mark screw holes and screw in position.
- C** Position lock body on opening frame ensuring a 2mm gap between edge of lock body and striker plate. NB: Pivot to bottom of lock to access screw holes. Mark position of holes and screw to opening frame.

Operation - Swing top section of lock body over peg and screw bolt clockwise with key provided. To unlock screw bolt anti-clockwise and swing top section of lock body clear of peg.

Safety tip - for child safety fit ERA Window Securistay Ref: 720, to restrict full opening.

Security tips - fit swing lock at top and bottom of window for maximum security and draught reduction. Always close and lock windows, and remove key from locks when leaving the house.

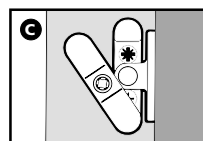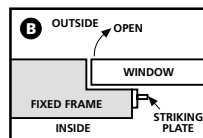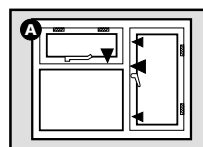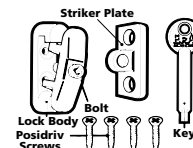

Reduce the risk with ERA PRODUCTS LTD
Call now for your FREE brochure
Willenhall, West Midlands, WV12 5RA ENGLAND

HELPLINE
01922 490 050